



Caterkid

Fun Food Equipment and Events

CANDY FLOSS MACHINE

OPERATING INSTRUCTIONS

Spin up some sweetness!



OPERATING INSTRUCTIONS



1 POSITION THE BOWL:

Carefully place the bowl onto the machine.



2 POWER UP:

Plug the machine into a 16 Amp, single-phase 220V socket.



3 FILL WITH SUGAR:

Fill the head with approximately 450 grams of candy floss sugar.



4 SWITCH ON:

Turn on the Mains (Power) switch.



5 ADJUST HEAT:

Turn the Heat Control Dial clockwise to increase production.



6 SPINNING MAGIC:


After 2-3 minutes the machine should begin to spin candy floss. Adjust the heat control to your desired production speed.



7 COOL DOWN:

When you're finished, turn the dial anti-clockwise to the full OFF position. Allow approx. 60 seconds for the head to cool down before switching the Mains (Power) OFF.

CANDY FLOSS MACHINE

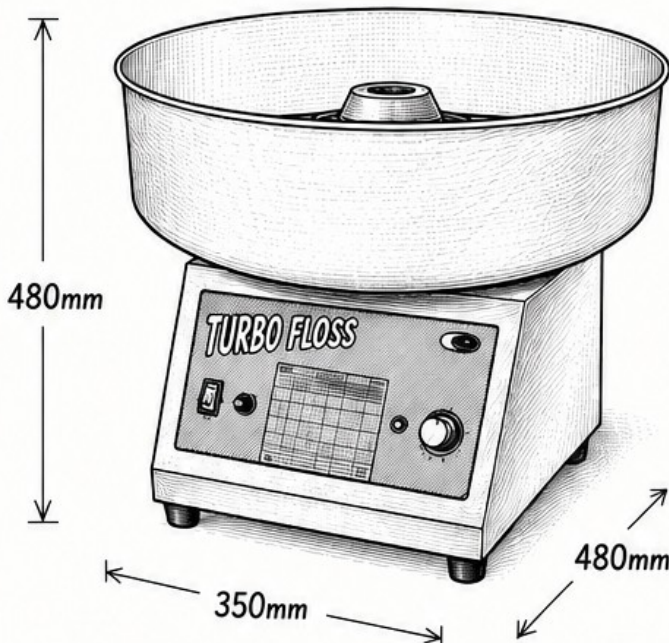

MACHINE DIMENSIONS:

Height: 480mm x Width: 350mm x Length: 480mm



BOWL DIAMETER:

645mm



WEIGHT:

15kg



POWER:

220 Volt / 16 Amp

Single Phase Power Only

No Generators or Inverters to be Used



HEAT CONTROL:


Adjustable heat control dial



USAGE:

Use only with Caterkid candy floss sugar

BOWL DIMENSIONS

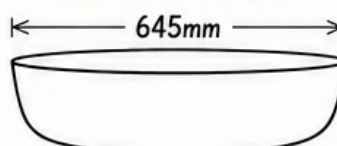

MAKING THE FLOSS



1 PREPARE THE BOWL:

Before switching on, use a damp cloth to wipe the inside of the bowl. This helps the first floss adhere to the side.



2 CHECK DIRECTION:

Observe the direction the floss is being made (e.g., if the motor turns clockwise, the floss is made clockwise). You will then rotate your straw/stick in the opposite direction (anti-clockwise in this example) and simultaneously twist the straw in the same anti-clockwise direction. (Reverse this if the motor spins in the opposite direction.)



3 ADJUST LEATHER FLOATERS (IF NEEDED):

The Turbo Floss head has two leather straps (floaters). By twisting the leading edge of a floater up, you create a downward production of floss. These can be adjusted by the operator to the required level of production, but only when the motor is in the OFF position.



4 EASY PICK-UP:

If you have difficulty getting the floss to adhere to your straw/stick, it can be helpful to dip the straw/stick in a cup of water or syrup first.

IMPORTANT NOTES

- ⚠ Never allow water to enter the spinning head of the machine.
- ⚠ Only use candy floss sugar supplied by Caterkid.
- ⚠ After use, remove the bowl and wash thoroughly with warm water and soap.
- ⚠ Do not clean any other part of the machine, including the spinning head. The Caterkid team will take care of all machine cleaning and maintenance.
- ⚠ Allow approximately 60 seconds for the spinning head to cool down before switching OFF the mains power.



www.caterkid.co.za



phil@caterkid.co.za



082 603 3846

→ Thank you for choosing Caterkid – where the good times swirl! ♥