



Caterkid

Fun Food Equipment and Events

SOFT SERVE MACHINE

OPERATING INSTRUCTIONS

Easy to use. Hard to resist!



OPERATING INSTRUCTIONS



1 ADD SOFT SERVE MIX:

Pour 5 Litre soft serve mix into hopper. Allow to defrost if supplied frozen. Once defrosted add to machine or refrigerate immediately.



2 POWER UP:

Do not use a generator, multi-plug or extension cord. Plug the machine into a 16amp wall socket.



3 WASH (FIRST RUN):

Press WASH. Allow to run for approx. 2 minutes. This will allow some of the mix down into the freezing cylinder and remove any air from the chamber.



4 STOP WASH:

Press WASH again to stop.



5 AUTO MODE:

Press AUTO, allow approx. 15–20 minutes. Once you hear the machine turn off the soft serve will be ready. To avoid over freezing do not switch on the machine long in advance.



6 SERVE:

Pull down the handle gently to make the first cup or cone.



7 PLEASE NOTE:

The machine will only produce 2 cones/cups per minute so please allow time for the machine to catch up if necessary.



8 SENSOR ALARM – LOW MIX:

Check the mix level in the hopper, add more mix or turn off AUTO. If the machine runs on AUTO without any mix in the hopper it will cause serious damage to the machine, costs will be for the customer's account.



9 TIP:

Chill the product before filling the hopper, this will speed up the freezing process.



10 END OF SERVICE:


Turn off AUTO. Press WASH and remove any leftover product in the machine by pulling down handle.



11 CLEANING:

Fill the hopper with warm soapy water and press WASH. Allow approx. 3 minutes and drain the machine. Fill the hopper with clean warm water and press WASH again, allow a further 3 minutes and drain. Caterkid will strip and clean the machine :)

SOFT SERVE MACHINE

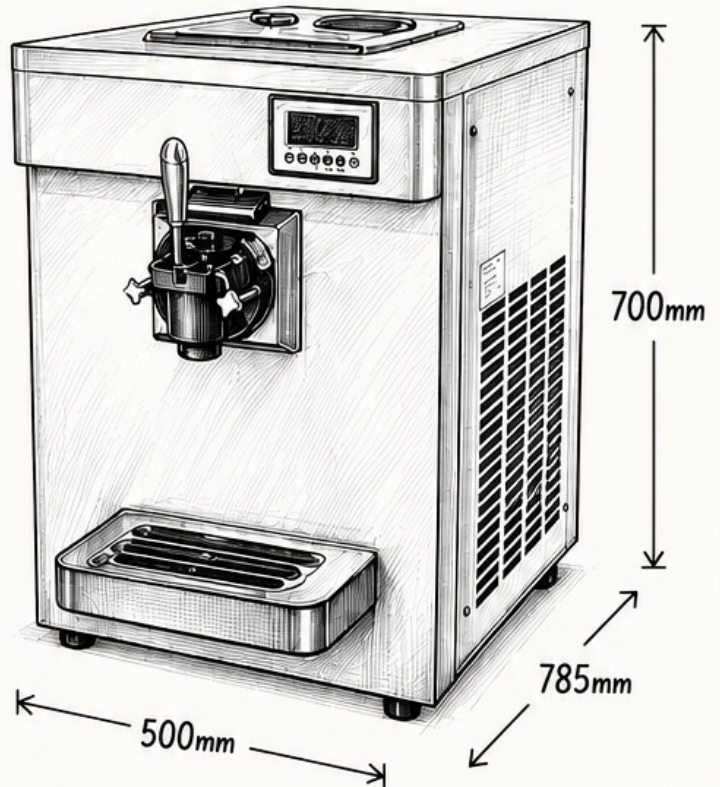

DIMENSIONS:

Height: 700mm x Width: 500mm x Depth: 785mm



POWER:

220 Volt / 3 Amp



CAPACITY:

5 Litre Hopper



FREEZE TIME:

Approx. 15–20 minutes



CONTROL PANEL:

WASH / AUTO / Temperature Display



PRODUCTIONS RATE:

2 Cones / Cups per minute

IMPORTANT NOTES

- ⚠ Only 16 Amp power (wall power) may be used, no generators.
- ⚠ Do not use a multi-plug or extension cord.
- ⚠ Always keep mix level above the minimum level in the hopper.
- ⚠ Never run the machine on AUTO without mix in the hopper. This can cause serious damage and will be for the customer's account.
- ⚠ Keep the machine well ventilated – allow at least 30 cm clearance between the machine and the wall on all sides to ensure proper airflow and efficient cooling.



www.caterkid.co.za



phil@caterkid.co.za



082 603 3846

→ Thank you for choosing Caterkid – where the good times swirl! ♥