



# Caterkid

Fun Food Equipment and Events

## MINI SINGLE BARREL SLUSH MACHINE OPERATING INSTRUCTIONS

Ice Cold Fun Made Easy!



### OPERATING INSTRUCTIONS



(a)

#### 1 PREPARE MACHINE:

Ensure the slush tank is securely clipped to the base.



(b)

#### 2 INSTALL DRIP TRAY:

You'll find the drip tray stored inside the slush tank. Remove and secure it to the front of the machine.



#### 3 POWER UP:

Plug the machine into a dedicated 16 Amp wall socket.



#### 4 ADD SLUSH MIX:

Fill the bowl with ready-to-use slush mix and replace the lid. Don't exceed the max level!



#### 5 SWITCH ON:

Turn the mains switch ON.



#### 6 SET FREEZE MODE:

Ensure the Freeze Switch (❄️) is in the ON position.



#### 7 FREEZE:

Allow approximately 180 minutes (3 hours) for the slush to reach serving consistency. If making cocktails, only add alcohol once the product is fully slushed.



#### 8 TOP UPS:

When topping up, make sure your slush mix is refrigerated to reduce the re-freeze time.



#### 9 DEFROST MODE:


At the end of service switch to Defrost Mode (~).



#### 10 CLEANING:

Flush the bowl thoroughly with warm water only. Never use hot water as this may damage machine components. Caterkid will perform all detailed cleaning and maintenance.

### MACHINE OVERVIEW & SPECIFICATIONS

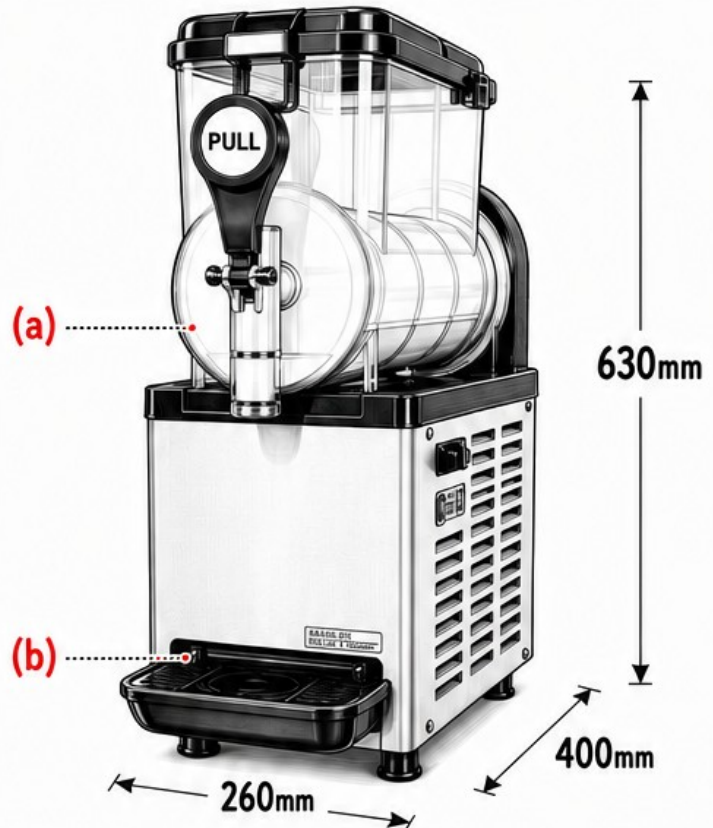

#### DIMENSIONS:

Width: 260mm  
Depth: 400mm  
Height: 630mm



#### WEIGHT:

22kg (net)



#### POWER:

300W



#### CAPACITY:

1 x 5 Litre Bowl



#### FREEZE TIME:

Approx. 180 Minutes  
(3 Hours)



#### VOLTAGE:

230V ~ 50Hz

### CORRECT SWITCH CONFIGURATION (FOR FREEZING)



(c)

(e)

✓ MAINS SWITCH:  
ON (I)

✓ FREEZE SWITCH (1):  
ON (I)

Both switches must be in the ON (I) position for freezing.

### IMPORTANT NOTES

- ⚠ Only 16 Amp power (wall power) may be used. No generators.
- ⚠ The slush mix supplied is ready-to-use. Do not dilute it.
- ⚠ Only Caterkid supplied slush mix may be used.
- ⚠ Allow approximately 180 minutes (3 hours) for a full 5 litre batch to freeze.

- ⚠ If making cocktails, only add alcohol once the product is fully slushed.
- ⚠ Do not adjust any machine settings.
- ⚠ If changing flavours, rinse the bowl thoroughly with cold water only. Do not use detergent.



[www.caterkid.co.za](http://www.caterkid.co.za)



[phil@caterkid.co.za](mailto:phil@caterkid.co.za)



082 603 3846

→ Thank you for choosing Caterkid - where the good times chill! ♥